



# TIGER GRAIN

bold, wild &  
recognisable


Collection



Linen light



Linen medium

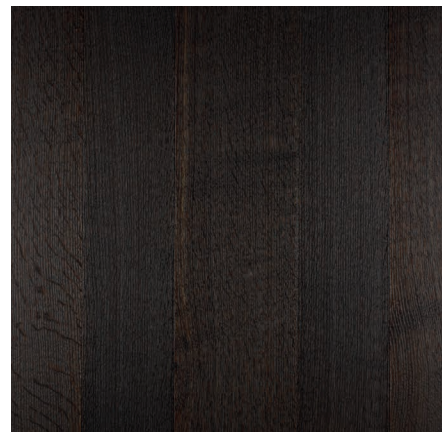

Linen dark

**Schotten  
& Hansen**

# Tiger Grain Collection

## Product specifications

<b>Description</b>	Construction: Multi-layer construction Top-Layer: Oak veneer Carrier: Birch plywood
<b>Length<sup>1</sup></b>	2400-2950 mm; proportionally short lengths up to 5 %.
<b>Width<sup>1</sup></b>	160-240 mm; In steps of 10 mm <sup>2</sup>
<b>Thickness<sup>1</sup></b>	ca. 15 mm <sup>3</sup> (± 0.5 mm)
<b>Top-layer<sup>1</sup></b>	Approx. 2.8 mm; glued waterproof and formaldehyde-free.
<b>Surface</b>	Schotten & Hansen pre-finished, permeable surface. Surface treatment with natural oils, resins and waxes. Schotten & Hansen surfaces can be regenerated without sanding or mechanical treatment.
<b>Wood moisture content</b>	On delivery: approx. 8 % ex works. A special drying process during production reduces shrinkage and swelling behaviour of the floor boards after installation.
<b>Emissions</b>	Formaldehyde emission according to EN 14342: Class E1, measured as EN 717- 1
<b>Fire behaviour classification</b>	Cfl – S 1 according to EN 13501-1:2010
<b>Further features</b>	Boards are grooved and tongued on the long sides, Face sides of the boards are grooved. Chamfer: approx. 0.7 mm, 30°. Other chamfer options on request.
<b>Installations</b>	Full bonding with permanently elastic adhesive. Installation according to DIN 18356. Requirement on subsoil: Installation-ready subsoil according to DIN 18356 and DIN 18202 chart 3, line 4 increased requirements. Recommended adhesive: BONA Quantum or adhesive of equal quality (adhesive used for installation has to be approved by general building inspectorate); suitable for gluing the floorboards on screed.
<b>Underfloor heating</b>	Schotten & Hansen floorboards are well-suited for use in combination with underfloor heating with hot water or electrically. Heat conductivity $\lambda$ [W/(m*K)]: top layer oak 0.169 (calculated according to EN 14342:2013) Heat contact resistance R [m <sup>2</sup> K/W]: overall construction 0.088 (calculated according to EN 14342:2013) Maximum surface temperature of the floorboards: 29° C.
<b>Cleaning &amp; Care</b>	Schotten & Hansen cleaning and caring products. Schotten & Hansen recommends the use of a floor polishing machine. For further information please see the cleaning and caring instructions or contact our service department: <a href="mailto:service@schotten-hansen.com">service@schotten-hansen.com</a>

<sup>1</sup> Dimensions may vary slightly due to production conditions and availability. Distribution of lengths and widths according to production requirements.

<sup>2</sup> Possible fixed widths: 160, 170, 180, 190, 200, 210, 220, 230, 2400 mm

<sup>3</sup> Other total thickness of boards possible on request.

# Tiger Grain Collection

## Collection Colours

light

medium

dark

Linen



## Selection


5 Tiger Grain

Even and calm wood structure with few small knots and fine cracks, mended by hand. The hand-picked feature of the cut wood rays results in a distinctive tiger-pelt appearance that gives contemporary flair to any space.

## Treatment

1 Brushed

Accentuate the wood's typical grain structure by brushing out early wood.



Colour between floorboards is subject to variations and display exhibits or samples, as far as these are due to the natural quality of the used material as well as customary.

**Schotten  
&Hansen**

Schotten & Hansen GmbH, August-Moralt-Straße 1-3, 86971 Peiting,  
T +49 8861 908 04-0, kontakt@schotten-hansen.com, www.schotten-hansen.com

# Tiger Grain Collection

## Further Information

### Indoor climate and wooden floor

Wood is a natural material that is adjusting to the indoor climate. Wood absorbs moisture from the air and releases it again.

We would like to point out that during the heating period, the floorboards might strongly dry out and thus develop shrinkage cracks. Cracks caused by low air humidity during the heating period do not justify complaint.

With the maintenance of a comfortable and healthy indoor climate of 20° C and 50% relative humidity during the heating season, you can largely avoid the negative effects of this natural phenomena.

Thermal- and hygrometers control the air in your rooms easily. In case the air is too dry, suitable measures for humidifying the air must be taken. We recommend you a humidifier control - hygrostat for obtaining a constant air humidity.

Installation should be carried out professionally by a trained Schotten & Hansen partner.

### Bonding

The preparation of the subsoil is to be carried out in accordance with the guidelines of the adhesive manufacturer and relevant DIN standards.

For the bonding of all Schotten & Hansen floor products we recommend a solvent-free and elastic adhesive.

In the process of glueing, full bonding to the subsoil and a sufficient contact pressure during the setting has to be ensured.

### Bonding on Screed

First, an inspection of the subsoil and the application requirements has to be conducted according to VOB Part B DIN 1961 and Part C DIN 18356.

Due to the large lengths and widths of some flooring products, increased care is required for the evenness of the subsoil.

### Installation on underfloor heating

All Schotten & Hansen long boards are to be fully bonded with elastic adhesive to underfloor heating. Prior to this, a thorough inspection of the heating screed's readiness for installation has to be carried out – in particular the heating protocol and the details of test points (pursuant to DIN standards) have to be documented by the screed layer. The adhesive must be suitable for bonding on an underfloor heating system.

Please observe the maximum surface temperature of 29° C.

Additionally, during a heating-period the air humidity should be improved. Otherwise the floorboards might strongly dry out and develop shrinkage cracks. Cracks caused by low air humidity during the heating period do not justify complaint.

### Important measurements prior to installation:

- Let the unpacked workpieces acclimatise in the final room conditions for approx. one week until the equilibrium moisture content is reached.
- Switch off underfloor heating three days before installation.
- Measure moisture content of the screed.
- Keep room climate constant at 45 % ± 5 % relative air humidity. This also applies for the next few days after the installation (during this time increase underfloor heating by 5° C per day).
- Prepare a heating protocol.

All information on this data sheet is to be considered as advice and is based on empirical investigations according to today's state of the art. Therefore, all provided information on the suitability, processing and application of our products, as well as technical advice and further particulars, do explicitly not release the customer and/or user from verifying the products' suitability by means of their own tests.

**Schotten  
&Hansen**